


Working with wedges

Last Modified on 05/11/2019 1:11 pm CET

Choose **platform** from the drop-down list in the **conveyor Setting** area.

If the selected platform permit you to work with wedges, a checkbox will be visible below the **Slide rail** row.

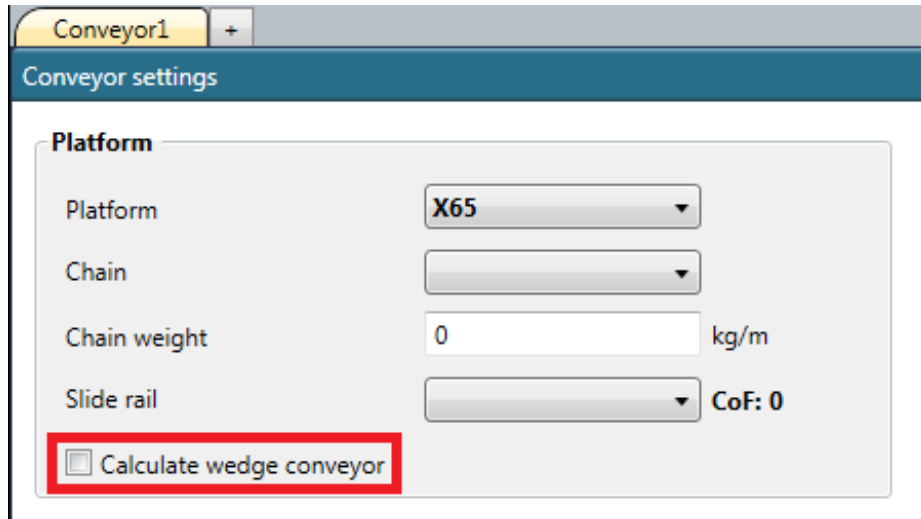

The image shows a software interface for configuring a conveyor. At the top, there is a tab labeled 'Conveyor1' with a plus sign. Below the tab is a header 'Conveyor settings'. The main area is titled 'Platform' and contains several settings:

- Platform:** A dropdown menu currently showing 'X65'.
- Chain:** A dropdown menu.
- Chain weight:** A text input field containing '0' followed by the unit 'kg/m'.
- Slide rail:** A dropdown menu.
- CoF:** A label 'CoF: 0' next to the Slide rail dropdown.
- Calculate wedge conveyor:** A checkbox located below the Slide rail dropdown, which is highlighted with a red rectangular border.

Check it in order to work with wedges. Note that the choice to work with wedges must be carried out before starting adding components. Once you have added a component to the layout, the checkbox is grayed out and can no longer be checked or unchecked.