

How to edit component properties

Last Modified on 05/11/2019 1:13 pm CET


Component properties like length, radius, angle etc can be changed after dropped into the layout.

The rule is that components that show a small pencil in the upper right corner are editable.



Angle 5-45°
Radius 1000

When dropped into the layout list, editable properties show a border around the value, just like a text box. If the component has a direction property this can always be changed by clicking the arrow. Exactly which properties that are editable varies from component to component.

Component	Length	Tension	Accumulation	Slope
 Plain bend XBBP 90A85TYP10 ← 46 500	801	0 N	0	0°