

# Updating components

Last Modified on 21/04/2015 9:14 am CEST

From version 1.6.5 of the Design Tool the user will be informed if there are components that can be updated in a layout. A component update can either be minor or major. The severity of the update will be shown when the user has loaded a saved layout.

## Minor changes

Minor changes may be simulation updates, geometries that do not impact major parts of the layout.

## Major changes

This may or may not impact the bill of material, and therefore it is important to update the components as soon as possible.

## How to update a component

1. Click on the message that is displayed in the messages panel
2. The window that is opened displays the components that can be updated
  - Click on one or several names to select it in the 3D world
  - Double click on one or several names to change focus in the 3D world
3. Select one or several components that you would like to update
4. Click **OK**
5. Press **Delete** to delete the components
6. Re-add them from the eCatalogue and then connect them
  - Tips, use handles to together with Quick adjust to simplify the manual labor of updating components
7. Save layout

## Note

In future versions the design tool will help in the replacing of components, so the above manual steps are not needed.